
Walmart New Game Changes Bin Changes

Open the door and enter code 123456 then password 1234


Please plan to activate **ALL** packs of scratch-off tickets you plan to load into the machine, then follow the next steps listed below (Please be sure to have a copy of the planogram your store follows)


- Select the Inventory Management Button and select the bin # you want to unload and replace with new games.
- Press the unload tickets button
- It will ask if you want to clear inventory select yes
- Inventory screen should now be blank of game and inventory info.
- Select the Load Inventory button
- Take one of the activated packs for that bin and scan ticket #000 hit submit
- Scan the last ticket of that pack OR you can just hit full pack and then submit
- Physically load the ticket into the bin with the highest ticket number first
- Verify the inventory number with what you have loaded.
 - If it is not correct you can just start over
 - if it is correct move on to the next game.
- Confirm and Print Inventory report when finished
- All games you loaded should appear on the front touch screen if successful once you close the door.

20 Game POG Stores with 1- GT20/Machine

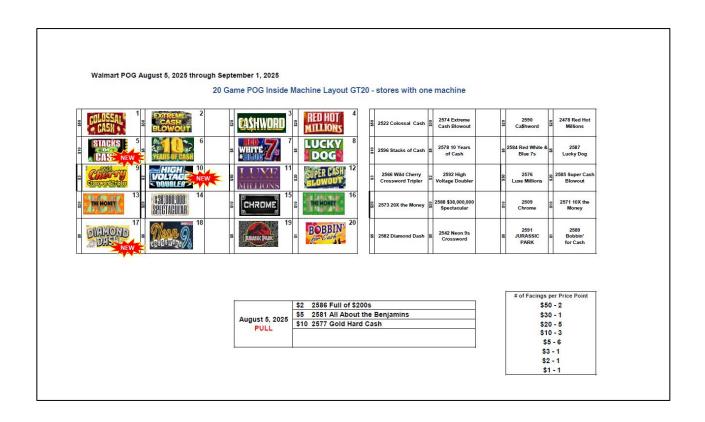

40 Game POG Stores with 2 - GT20/Machines

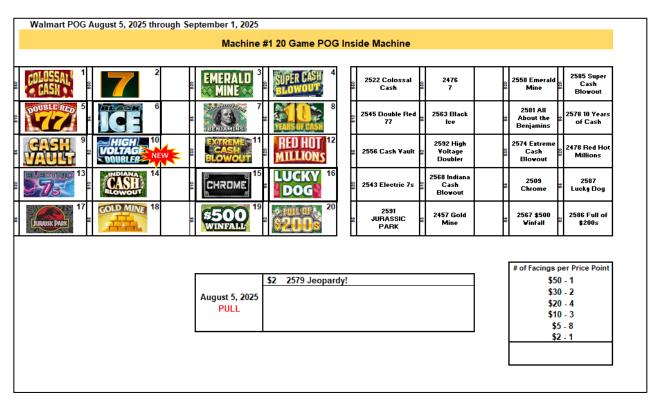

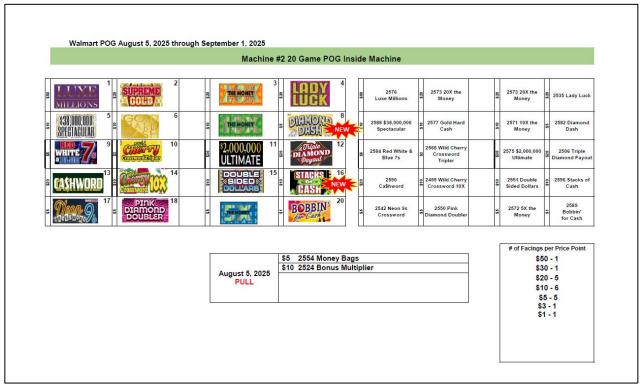

28 Game POG Stores with a - GT28/Machine

